


DLR1509SPF

Gauge usage patterns

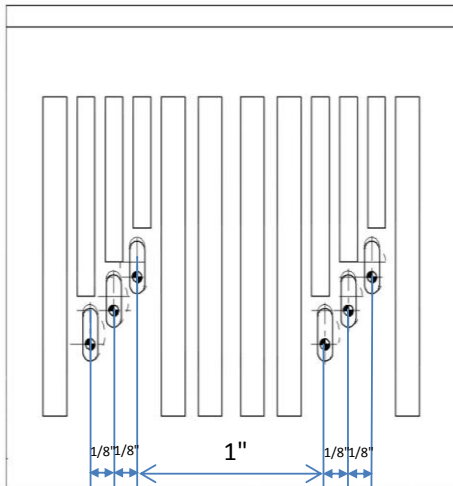

1"+1/2"	=	2.86	cm
1"+3/8"	=	3.49	cm
1"+1/4"	=	3.18	cm
1"+1/8"	=	2.86	cm
1"	=	2.54	cm
1/2"	=	1.27	cm
3/8"	=	0.95	cm
1/4"	=	0.64	cm
1/8"	=	0.32	cm

2 + 2 needle


	Pattern1	1/4"	+	1"	+	1/4"
	Pattern2	1/4"	+	1"	+	1/8"
	Pattern3	1/4"	+	1"+1/8"	+	1/8"
	Pattern4	1/8"	+	1"+1/8"	+	1/4"
	Pattern5	1/8"	+	1"+1/8"	+	1/8"
	Pattern6	1/8"	+	1"+1/4"	+	1/8"
	Pattern7	1/8"	+	1"	+	1/4"
	Pattern8	1/8"	+	1"	+	1/8"
	Pattern9	1/8"	+	1"+1/8"	+	1/8"

1 + 2 needle

	Pattern1	1"+1/4"	+	1/4"
	Pattern2	1"+1/4"	+	1/8"
	Pattern3	1"+3/8"	+	1/8"
	Pattern4	1"+1/8"	+	1/4"
	Pattern5	1"+1/8"	+	1/8"
	Pattern7	1"	+	1/4"
	Pattern8	1"	+	1/8"

DLR1509SPF

Gauge usage patterns

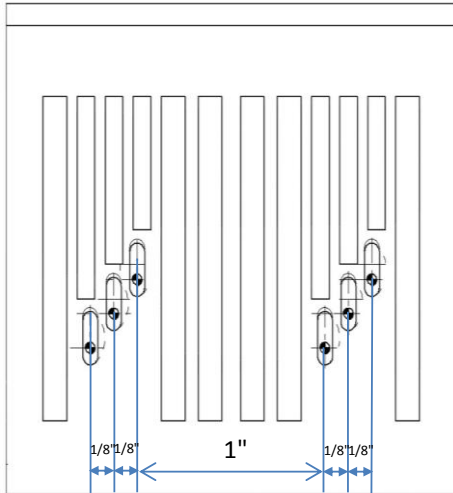

$1''+1/2''$	=	2.86	cm
$1''+3/8''$	=	1.59	cm
$1''+1/4''$	=	0.96	cm
$1''+1/8''$	=	1.27	cm
1"	=	2.54	cm
1/2"	=	1.27	cm
3/8"	=	0.95	cm
1/4"	=	0.64	cm
1/8"	=	0.32	cm

2 + 1 needle

	Pattern1	$1/4''$	+	1"
	Pattern2	$1/8''$	+	$1''+1/8''$
	Pattern3	$1/8''$	+	1"
	Pattern4	$1/4''$	+	$1''+1/8''$
	Pattern5	$1/8''$	+	$1''+1/4''$
	Pattern7	$1/4''$	+	$1''+1/4''$
	Pattern8	$1/8''$	+	$1''+3/8''$

1 + 1 needle

	Pattern1	$1''+1/4''$
	Pattern2	$1''+3/8''$
	Pattern3	$1''+1/2''$
	Pattern7	1"
	Pattern8	$1''+1/8''$